

Loading Plan

Title:	Loading Plan Type 800 Dolavs	Reference	PAAGN004/Schedule 6
Date	23 rd September 2011	By:	J. Langham
Calculation ref	LLWR/PAAGN004/CALC/004	Issue	1

1. Box Dimensions

Item	Size (L x W x H)	Max Weight (kg)
800 Dolav Box	1.2m x 0.8m x 0.74m	700

2. Equipment requirements

The following table shows how many chocks and strap pairs are required for different weights of box.

Mass, M (kg)	Number of Chocks in each Direction	Lateral Strap Pairs	Strap Locations	Longitudinal Strap Pairs	Strap Locations
100	2	2	Box 1 A2, D2, A6, D6 Box2 E2, H2, E6, H6	0	0
700	2	2	Box 3 I4, L4, I7, L7		

Table 1

3. Method

Loading of Dolav boxes shall be in a manner to prevent free movement of contents during transport operations. + The centre of gravity of the container shall be within the prescribed limits, as defined in section 7 of the Packaging and Handling instructions for the TC01, TC03 and TC09 container (OM_010290_MECH_00001_E).


The straps for each box shall be fastened to the locations presented in Table 1 depending on what weight the boxes are.

Each strap shall be fixed to the grid lattice in accordance with Part F in Guidance Note PAAGN004.

Place the Dolav boxes into the container. The box shall be placed in the same location as is detailed in Figure 1.

Once the boxes have been placed in the container fit chocks between the box and the grid lattice. The chocks shall fit securely between the box and the grid lattice.

To complete the securing of the box within the container fix the opposing straps to each other and tighten them to ensure they are secure. Hand force (500N max) is only permitted when tensioning the strap. Mechanical aids such as levers, bars etc, are not to be used as extensions unless they are part of the tensing device.

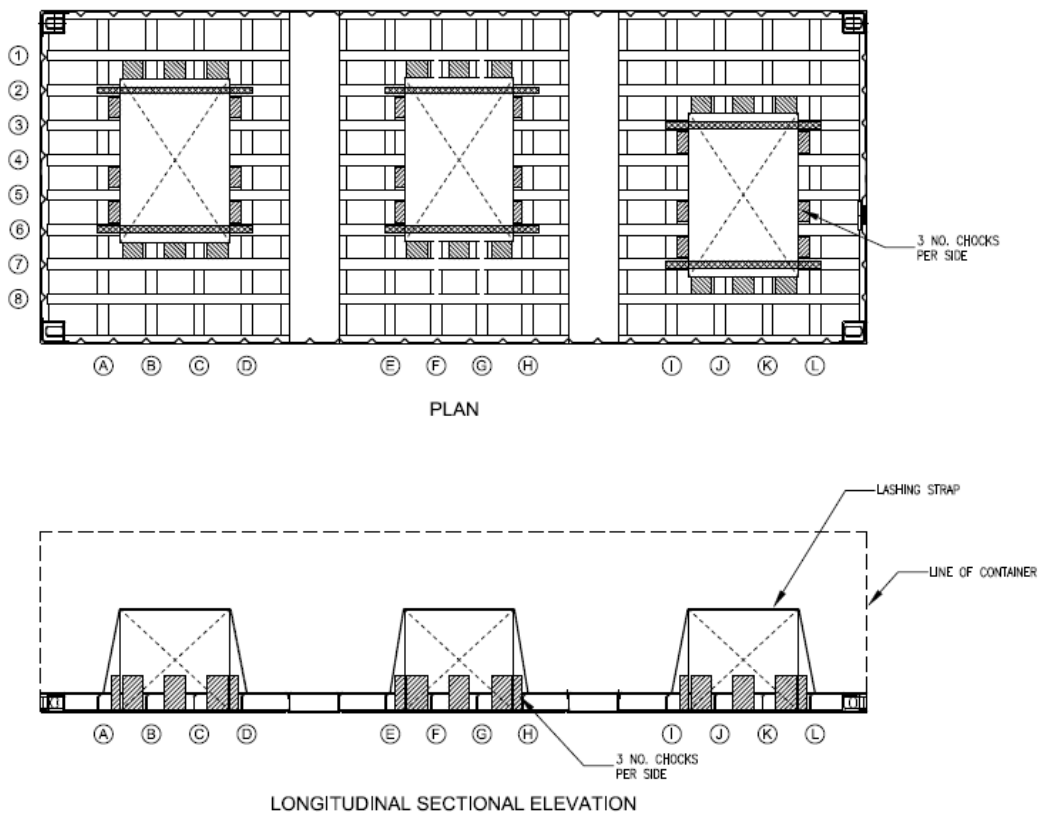

DOLAV 800 BOX

Figure 1